



# Half Round Evaporators

**60**  
Hz

## PRODUCT DATA & INSTALLATION

Bulletin B30-BR-PDI-18


Part # 1064604

|  |   |  |
|--|---|--|
|  | PRODUCT SUPPORT   |  |
|  | web: <a href="http://b-rp.ca/bruc">b-rp.ca/bruc</a>     |  |
|  | email: <a href="mailto:evaps@b-rp.ca">evaps@b-rp.ca</a> |  |
|  | call: 1-844-893-3222 x520                               |  |

**High Temperature Applications  
(35 °F and Higher)**


**Air Defrost**

**Electrical Power:  
115/1/60, 208-230/1/60**

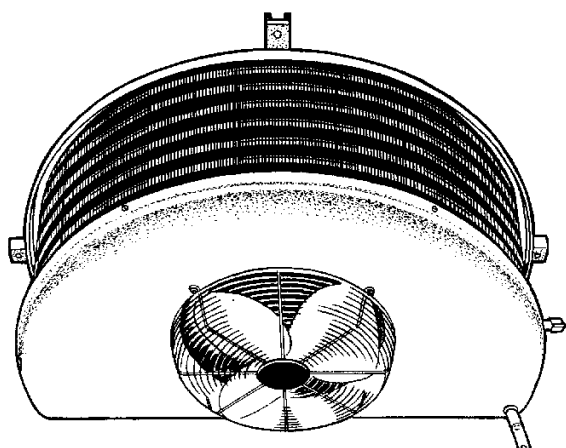

- Compatible with Low GWP Refrigerants
- Direct backwall location and minimum height provides maximum usable storage space.
- Textured heavy gauge aluminum cabinet - lightweight, doesn't show scratches.
- Rigid, slotted channel hangers simplify installation.
- Hinged drain pan for ease of cleaning and service.
- Full collar aluminum plate fins on expanded seamless copper tubes ensure optimum heat transfer efficiency.
- Fan motors are inherently protected
- Standard EC motors

### NOMENCLATURE

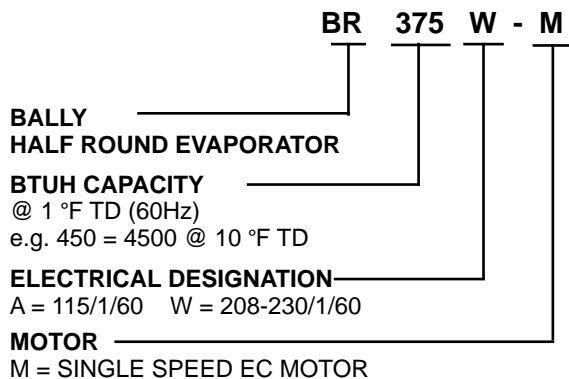

### CONTENTS

|                                   | PAGE  |
|-----------------------------------|-------|
| Nomenclature.....                 | Cover |
| Capacity Data.....                | 2     |
| Electrical Data.....              | 2     |
| Typical Field Wiring.....         | 2     |
| Dimensional & Physical Data.....  | 3     |
| Thermostatic Expansion Valve..... | 4     |
| Installation Instructions.....    | 5     |
| Project Information.....          | 6     |
| Product Support Resources.....    | 7     |
| “As Built” Service Parts.....     | Back  |

**BR**

**CAPACITY DATA - ALL MODELS**

**60Hz**

| Model BR                    |                                 | 375          | 485          | 595           | 775           | 905           | 1025          | 1305          | 2050           |        |
|-----------------------------|---------------------------------|--------------|--------------|---------------|---------------|---------------|---------------|---------------|----------------|--------|
| Number of Fans              |                                 | 1            | 1            | 1             | 1             | 1             | 1             | 1             | 2              |        |
| Capacity<br>BTUH<br>(WATTS) | Evap<br>Temp.<br>25°F<br>(-4°C) | R407A        | 3540         | 4640          | 5750          | 7510          | 8460          | 9700          | 12200          | 19400  |
|                             |                                 | R448A        | (1038)       | (1359)        | (1684)        | (2199)        | (2478)        | (2840)        | (3563)         | (5680) |
|                             |                                 | R407C        | 3360         | 4392          | 5445          | 7110          | 8010          | 9180          | 11600          | 18400  |
|                             |                                 |              | (984)        | (1287)        | (1596)        | (2084)        | (2347)        | (2690)        | (3376)         | (5381) |
|                             |                                 | R404A        | 3730         | 4880          | 6050          | 7900          | 8900          | 10200         | 12800          | 20400  |
|                             |                                 |              | (1093)       | (1430)        | (1773)        | (2315)        | (2608)        | (2989)        | (3751)         | (5979) |
|                             | R507                            | 3540         | 4640         | 5750          | 7510          | 8500          | 9700          | 12200         | 19400          |        |
|                             |                                 | (1038)       | (1359)       | (1684)        | (2199)        | (2478)        | (2840)        | (3563)        | (5680)         |        |
|                             | R22                             | 3360         | 4392         | 5445          | 7110          | 8010          | 9180          | 11600         | 18400          |        |
|                             |                                 | (984)        | (1287)       | (1596)        | (2084)        | (2347)        | (2690)        | (3376)        | (5381)         |        |
|                             | R134a                           | 3540         | 4640         | 5750          | 7510          | 8500          | 9700          | 12200         | 19400          |        |
|                             |                                 | (1038)       | (1359)       | (1684)        | (2199)        | (2478)        | (2840)        | (3563)        | (5680)         |        |
| Air Flow                    | CFM (L/s)                       | 770<br>(363) | 770<br>(363) | 1280<br>(604) | 1300<br>(614) | 1380<br>(651) | 2025<br>(956) | 2000<br>(944) | 4050<br>(1911) |        |
| Refrigerant **<br>Charge    | Lbs<br>(Kg)                     | 1.4<br>(0.6) | 1.9<br>(0.9) | 2.3<br>(1.0)  | 3.3<br>(1.5)  | 3.6<br>(1.6)  | 4.1<br>(1.9)  | 5.3<br>(2.4)  | 8.3<br>(3.7)   |        |

Capacities rated using 10°F (5.6°C) TD & 100°F (38°C) liquid temperature.

Capacities at other TD within a range of 8 to 15 °F (4.4 to 8.3°C) are directly proportional to TD, or use formula: Capacity = Rated capacity ÷ 10 x TD.

For capacities at TD outside of range 8 to 15 °F (4.4 to 8.3°C), or liquid temperature lower than 75°F (24°), consult factory.

Capacities for R448A, R407A and R407C are based on mean temperature. Mean temperature is the average temperature between the saturated suction temperature and the temperature feeding the evaporator. For dew point ratings, consult factory.

For R449A, use R448A data.


**\*\* REFRIGERANT CHARGE CONVERSION FACTORS**

| R448A | R407C | R404A | R507 | R22  | R134a |
|-------|-------|-------|------|------|-------|
| 0.96  | 0.99  | 0.92  | 0.93 | 1.02 | 1.03  |


**ELECTRICAL DATA**

**SINGLE SPEED EC MOTOR(S)**

| MODEL BR | QTY. | POWER SUPPLY | HP   | RPM  | WATTS | TOTAL MOTOR FLA | MCA  | MOP |
|----------|------|--------------|------|------|-------|-----------------|------|-----|
| 375      | 1    | 115/1/60     | 1/20 | 1550 | 26    | 0.5             | 0.63 | 15  |
| 485      | 1    | 115/1/60     | 1/20 | 1550 | 26    | 0.5             | 0.63 | 15  |
| 595      | 1    | 115/1/60     | 1/20 | 1550 | 26    | 0.5             | 0.63 | 15  |
| 775      | 1    | 115/1/60     | 1/12 | 1070 | 84    | 1.5             | 1.88 | 15  |
| 905      | 1    | 115/1/60     | 1/12 | 1070 | 84    | 1.5             | 1.88 | 15  |
| 1025     | 1    | 115/1/60     | 1/12 | 1070 | 84    | 1.5             | 1.88 | 15  |
| 1305     | 1    | 115/1/60     | 1/12 | 1070 | 84    | 1.5             | 1.88 | 15  |
| 2050     | 2    | 115/1/60     | 1/12 | 1070 | 168   | 3.0             | 3.38 | 15  |
| 775      | 1    | 208-230/1/60 | 1/10 | 1070 | 86    | 1               | 1.25 | 15  |
| 905      | 1    | 208-230/1/60 | 1/10 | 1070 | 86    | 1               | 1.25 | 15  |
| 1025     | 1    | 208-230/1/60 | 1/10 | 1070 | 86    | 1               | 1.25 | 15  |
| 1305     | 1    | 208-230/1/60 | 1/10 | 1070 | 86    | 1               | 1.25 | 15  |
| 2050     | 2    | 208-230/1/60 | 1/10 | 1070 | 172   | 2               | 2.25 | 15  |

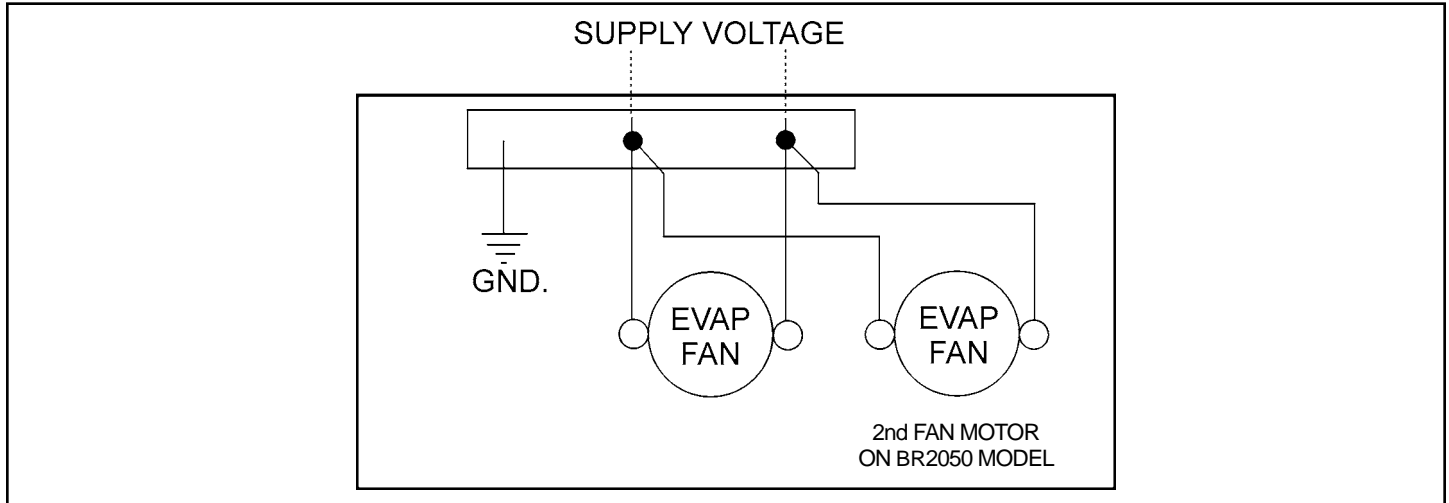

**DIMENSIONAL AND PHYSICAL DATA**

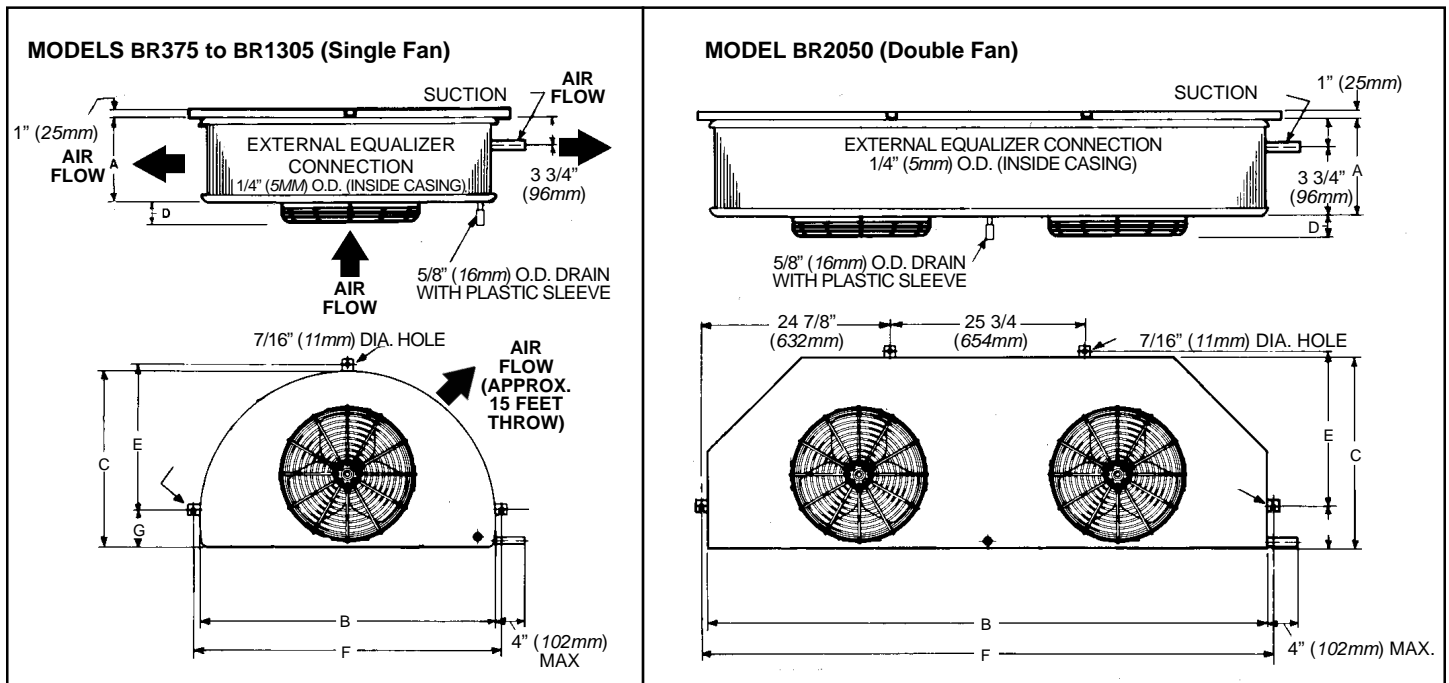

| MODEL BR |    | A       | B        | C       | D      | E       | F        | G       | Suct. Conn. O.D. |      | Shipping Weight |      |
|----------|----|---------|----------|---------|--------|---------|----------|---------|------------------|------|-----------------|------|
|          |    |         |          |         |        |         |          |         | in               | mm   | Lbs.            | Kg.  |
| 375      | in | 8 1/8   | 33 1/4   | 20 3/4  | 2      | 16 3/4  | 34 3/4   | 4 3/4   | 5/8              | 15.9 | 72              | 32.7 |
| 485      | mm | (206.4) | (844.6)  | (527.0) | (50.8) | (425.5) | (882.7)  | (120.7) | 5/8              | 15.9 | 76              | 34.5 |
| 595      | in | 11 1/8  | 39 1/4   | 23 3/4  | 2 1/4  | 19 3/8  | 40 3/4   | 5 1/8   | 5/8              | 15.9 | 98              | 44.5 |
| 775      | mm | (282.6) | (997.0)  | (603.3) | (57.2) | (492.1) | (1035.0) | (130.2) | 7/8              | 22.2 | 104             | 47.2 |
| 905      | in | 11 1/8  | 42 1/4   | 25 1/4  | 2 1/2  | 20 3/8  | 43 3/4   | 5 5/8   | 7/8              | 22.2 | 108             | 49   |
| 1025     | mm | (282.6) | (1073.1) | (641.4) | (63.5) | (417.5) | (1111.3) | (142.9) | 7/8              | 22.2 | 114             | 51.2 |
| 1305     | in | 12 5/8  | 42 1/4   | 25 1/4  | 2 1/2  | 20 3/8  | 43 3/4   | 5 5/8   | 7/8              | 22.2 | 124             | 56.2 |
| mm       |    | (320.7) | (1073.1) | (641.4) | (63.5) | (417.5) | (1111.3) | (142.9) | 7/8              | 22.2 | 124             | 56.2 |
| 2050     | in | 12 5/8  | 74       | 25 1/4  | 2 1/2  | 20 3/8  | 75 1/2   | 5 5/8   | 1 1/8            | 28.6 | 187             | 84.8 |
| mm       |    | (320.7) | (1879.6) | (641.4) | (63.5) | (417.5) | (1917.5) | (142.9) | 1 1/8            | 28.6 | 187             | 84.8 |

NOTE: 5/8" (15.9 mm) O.D. Drain connection on all models.  
1/2" (12.7 mm) Sweat TX Valve connection on all models.

**BR**

# THERMOSTATIC EXPANSION VALVE SELECTION CHART

**60Hz**

## FOR +35°F ROOMS AND UP

| AIR DEFROST |       | SPORLAN VALVE MODEL   |            |            |
|-------------|-------|-----------------------|------------|------------|
| MODEL BR    | TD °F | R448A R407A R407C R22 | R404A R507 | R134a      |
| 375         | 10    | SBFVE-AAA-C           | SBFSE-AA-C | SBFJE-AA-C |
|             | 12    | SBFVE-AAA-C           | SBFSE-AA-C | SBFJE-AA-C |
|             | 15    | SBFVE-AA-C            | SBFSE-AA-C | SBFJE-AA-C |
| 485         | 10    | SBFVE-AA-C            | SBFSE-AA-C | SBFJE-AA-C |
|             | 12    | SBFVE-AA-C            | SBFSE-AA-C | SBFJE-AA-C |
|             | 15    | SBFVE-AA-C            | SBFSE-A-C  | SBFJE-A-C  |
| 595         | 10    | SBFVE-AA-C            | SBFSE-AA-C | SBFJE-AA-C |
|             | 12    | SBFVE-AA-C            | SBFSE-A-C  | SBFJE-A-C  |
|             | 15    | SBFVE-AA-C            | SBFSE-A-C  | SBFJE-A-C  |
| 775         | 10    | SBFVE-AA-C            | SBFSE-A-C  | SBFJE-A-C  |
|             | 12    | SBFVE-AA-C            | SBFSE-A-C  | SBFJE-A-C  |
|             | 15    | SBFVE-A-C             | SBFSE-A-C  | SBFJE-A-C  |
| 905         | 10    | SBFVE-AA-C            | SBFSE-A-C  | SBFJE-A-C  |
|             | 12    | SBFVE-A-C             | SBFSE-A-C  | SBFJE-A-C  |
|             | 15    | SBFVE-A-C             | SBFSE-A-C  | SBFJE-A-C  |
| 1025        | 10    | SBFVE-AA-C            | SBFSE-A-C  | SBFJE-A-C  |
|             | 12    | SBFVE-A-C             | SBFSE-A-C  | SBFJE-A-C  |
|             | 15    | SBFVE-A-C             | SBFSE-B-C  | SBFJE-B-C  |
| 1305        | 10    | SBFVE-A-C             | SBFSE-A-C  | SBFJE-A-C  |
|             | 12    | SBFVE-A-C             | SBFSE-B-C  | SBFJE-B-C  |
|             | 15    | SBFVE-A-C             | SBFSE-B-C  | SBFJE-B-C  |
| 2050        | 10    | SBFVE-A-C             | SBFSE-B-C  | SBFJE-B-C  |
|             | 12    | SBFVE-B-C             | SBFSE-B-C  | SBFJE-B-C  |
|             | 15    | SBFVE-B-C             | SBFSE-C-C  | SBFJE-C-C  |

**Selections based on 100° Liquid**

For R449A, use R448A data.

## APPLICATION

High Temp Evaporators are designed for use with a wide variety of popular refrigerants. At room temperatures above 34°F and evaporating temps no lower than 27°F the air flowing through the coil will accomplish the defrost. Temperatures of 34°F and below (to -40°F) require positive defrosting. (either Electric or Hot Gas). The coil must not be exposed to any abnormal atmospheric or acidic environments. This may result in corrosion to the cabinet and possible coil failure (leaks). (Consult manufacturer for optional baked on phenolic protective coatings).

## INSTALLATION

The installation and start-up of evaporators should only be performed by qualified refrigeration mechanics. This equipment should be installed in accordance with all applicable codes, ordinances and local by-laws.

## INSPECTION

Inspect all equipment before unpacking for visible signs of damage or loss. Check shipping list against material received to ensure shipment is complete.

**IMPORTANT:** Remember, you, the consignee, must make any claim necessary against the transportation company. Shipping damage or missing parts, when discovered at the outset, will prevent later unnecessary and costly delays. **If damage or loss during transport is evident, make claim to carrier, as this will be their responsibility, not the manufacturer's.**

Should carton be damaged, but damage to equipment is not obvious, a claim should be filed for "concealed damage" with the carrier.

**IMPORTANT:** The electrical characteristics of the unit should be checked at this time to make sure they correspond to those ordered and to electrical power available at the job site. Save all shipping papers, tags and instruction sheets for reference by installer and owner.

## LOCATION

The unit location in the room should be selected to ensure uniform air distribution throughout the entire space to be refrigerated. Make sure that the air is not blown directly out through the opened door and that the product does not obstruct the free circulation of air.

**NOTE: These units drawn air through the fan and discharge air from the coil side.**

When installing the unit adjacent to a wall sufficient clearance (2" (50mm) minimum) must be provided to allow the hinged drain pan to be lowered for servicing the unit. Channel type hangers are provided. Rear hangers are slotted to facilitate installation. See dimensional data.

## MOUNTING

Mounting brackets with 7/16" dia holes are provided for flush mounting to the ceiling. For details refer to dimensional data on page 3.

**Ensure that the ceiling is level since the drain pan has been sloped for drainage during the defrost cycle.**

## DRAIN LINE

The drain line should be run from the drain connection, sloping at least 4" per foot. A trap outside the room will prevent warm air from entering through the tubing.

Connection should be made to proper drainage facilities that comply with local regulations.

**Ensure that the drain pan has sufficient slope for proper drainage (prevention of ice build up/blockage in pan).**

## PIPING

Refrigerant line sizes are important and may not be the same size as the coil connections. (depends on the length of run) If in doubt, consult "Recommended refrigerant line sizes" charts. (Engineering Manuals or other recognized sources of information).

## WIRING

Wire system in accordance with governing standards and local codes. See data and wiring diagram on pages 2-3, for wiring arrangement. Electrical wiring is to be sized in accordance with minimum ampacity rating.

## SYSTEM CHECK

### Before Start-Up:

1. All wiring should be in accordance with local codes.
2. Refrigerant lines should be properly sized.
3. Off-cycle defrost systems should include a liquid line solenoid valve.
4. Thorough evacuation and, dehydration has been performed.
5. The suction, discharge, and receiver service valves must be open.
6. The system should include a liquid line drier moisture indicator and suction filter.
7. Pour enough water into the drain pan to allow a good check on drainage and seal the trap.

### After Start-Up:

1. Check the compressor oil level to ensure the correct oil charge.
2. Be sure that the expansion valve is properly set to provide the correct amount of superheat.
3. Heavy moisture loads are usually encountered when starting the system for the first time.
4. Check for proper evaporator fan blade rotation.

## MAINTENANCE

The unit should be periodically inspected for any dirt or build-up on the fin surface and cleaned if necessary with a soft whisk or brush.


**BR**

**PROJECT INFORMATION**

**60Hz**

|                   |                    |
|-------------------|--------------------|
| System            |                    |
| Model Number      | Date of Start-Up   |
| Serial Number     | Service Contractor |
| Refrigerant       | Phone              |
| Electrical Supply | E-Mail             |

|   |  |
|---|--|
|  <p><b>PRODUCT SUPPORT</b></p> | <p><i>web:</i> <b><a href="http://b-rp.ca/bruc">b-rp.ca/bruc</a></b><br/><i>email:</i> <b><a href="mailto:evaps@b-rp.ca">evaps@b-rp.ca</a></b><br/><i>call:</i> <b>1-844-893-3222 x520</b></p> |
|---|--|

|   |  |
|---|--|
|  <p><b>TROUBLESHOOTING</b></p> | <p><i>email:</i> <b><a href="mailto:troubleshooting@b-rp.ca">troubleshooting@b-rp.ca</a></b><br/><i>call:</i> <b>1-844-893-3222 x529</b></p> |
|---|--|

|   |  |
|---|--|
|  <p><b>SERVICE PARTS</b></p> | <p><i>web:</i> <b><a href="http://b-rp.ca/parts">b-rp.ca/parts</a></b><br/><i>email:</i> <b><a href="mailto:parts@b-rp.ca">parts@b-rp.ca</a></b><br/><i>call:</i> <b>1-844-893-3222 x501</b></p> |
|---|--|

|   |  |
|---|--|
|  <p><b>WARRANTY</b></p> | <p><i>web:</i> <b><a href="http://b-rp.ca/warranty">b-rp.ca/warranty</a></b><br/><i>email:</i> <b><a href="mailto:warranty@b-rp.ca">warranty@b-rp.ca</a></b><br/><i>call:</i> <b>1-844-893-3222 ext. 501</b></p> |
|---|--|

|  |  |
|--|--|
|  <p><b>ORDERS</b></p> | <p><i>email:</i> <b><a href="mailto:orders@b-rp.ca">orders@b-rp.ca</a></b><br/><i>call:</i> <b>1-844-893-3222 x501</b></p> |
|--|--|

|  |  |
|--|--|
|  <p><b>SHIPPING</b></p> | <p><i>email:</i> <b><a href="mailto:shipping@b-rp.ca">shipping@b-rp.ca</a></b><br/><i>call:</i> <b>1-844-893-3222 x503</b></p> |
|--|--|

# “AS BUILT” SERVICE PARTS LIST

Service Parts List  
Label  
To Be Attached  
*HERE*



**General Sales, Parts & Service, Manufacturing & Engineering**  
135 Little Nine Drive, Morehead City, NC 28557  
252-240-2829 • 1-800-24-BALLY • FAX: 252-240-0384  
e-mail: [ballysales@ballyrefboxes.com](mailto:ballysales@ballyrefboxes.com) • [www.ballyrefboxes.com](http://www.ballyrefboxes.com)



DISTRIBUTED BY:

